


## Quickstart Guide


### I. Parts Description :

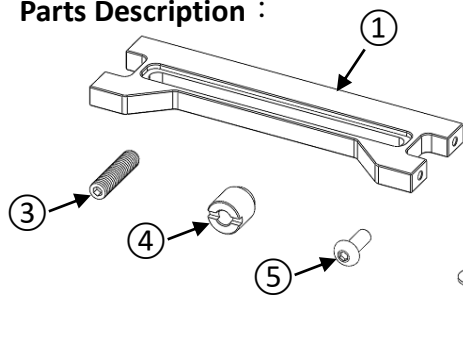


- ①Dedicated Motor Bracket
- ②Spacer for Flexible Coupling
- ③Screw Shaft
- ④Fixing Knurled Knob
- ⑤Fixing Screw (M4\*10L)
- ⑥Fixing Washer

### II. Steps :


1. Remove the focus wheel on left side, and adjust the focuser until you see the flat point of the screw shaft from the Hole A. (Fig.1)
2. Install the EAF flexible coupling (spec: 5-4mm) on telescope focuser shaft and tighten the lock screw as usual. (Fig.2)
3. Replace the original focuser screw from Hole B by using the ③screw shaft (Fig.3)

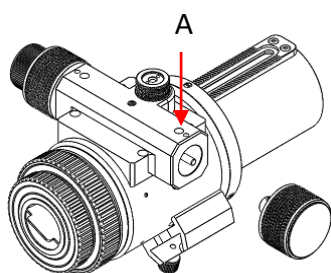

(Fig.1)

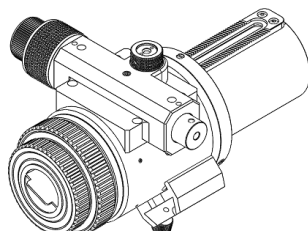


(Fig.2)

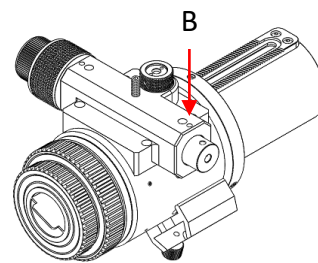


(Fig.3)

4. Use ①Dedicated Motor bracket to connect the EAF Bracket plate with EAF screws as usual. Make sure the direction of the motor bracket is correct when you install. (Fig.4)
5. Fix ①Dedicated Motor bracket by using ④Fixing Knurled Knob. Make sure the knob direction is correct when thread in. Do not tighten the knob to the end. (Fig.5)

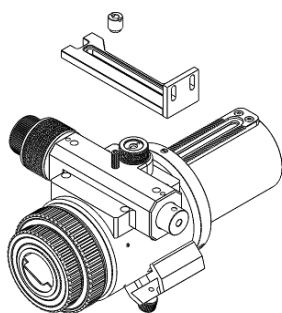


(Fig.4)

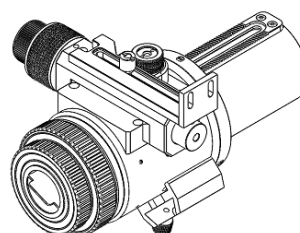


(Fig.5)

6. Put ②Spacer for Flexible Coupling into the EAF body and then connect to flexible coupling as usual step. (Fig.6) (Please follow the EAF Installation Instruction)
7. Insert ⑤Fixing Screw (M4\*10L) into ⑥Fixing Washer and then thread in the Hole C (Fig.7).

Make sure the installation of the EAF body is fixed firmly on focuser before operation.

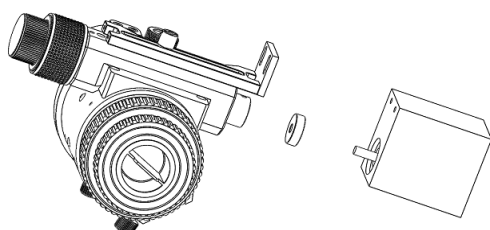

(Fig.6)

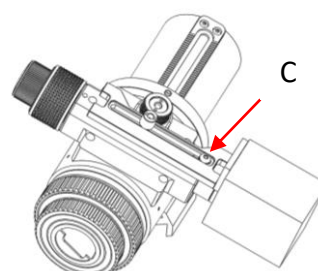

(Fig.7)