



# GSO LINEAR BEARING FOCUSER EAF BRACKET INSTALLATION INSTRUCTIONS

(EAF-GSO-2LBF / EAF-GSO-3.25LBF)

Tools needed: 1.5mm hex key, 2.5mm hex key

**Please follow carefully!**

1. With the bottom of the focuser pointing up to avoid falling, remove the 4 focuser housing screws.
2. Locate included (4) M3x14mm socket head screws. Using the 2.5mm hex key, secure the bracket to the focuser by evenly tightening all 4 screws until they are snug. Tighten 1/4 turn more, being careful to tighten all 4 screws evenly.
3. Slide the coupler onto the focuser pinion shaft.
4. Attach the EAF to the bracket using M4 screws supplied by ZWO with the EAF.
5. Using the 1.5mm hex key, tighten the set screws on the coupler until they are snug. Do not over tighten.