

How to change the NOMAD to a Vixen dovetail plate base or Tall Arca-swiss plate base?

Use the wrench (a black wrench will be included) to screw out the original base of NOMAD




Screw out the plate and keep the small screws well



Take the Vixen base or tall arca base and match it to two screw holes on the NOMAD bottom, screw the screws back into the base



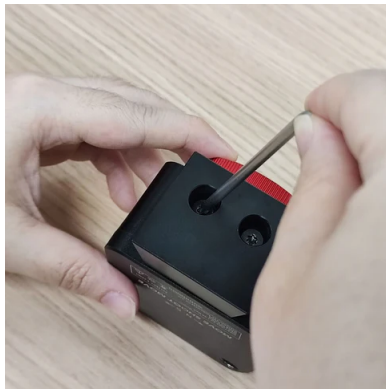

Done



You can try attaching it to the wedge you have



Nomad with the Tall Arca-swiss plate on the Benro Geared Head

Credit to [@MrRat.com](#)