



SUZHOU ZWO CO., LTD.



ZWO 滤镜轮传感器清洁参考手册

ZWO clean the sensor of EFW reference manual

文档编号: ZW19006170ACSC

ZWO Co., Ltd.

Phone: +86 512 65923102

Web: <http://www.zwoptical.com>



SUZHOU ZWO CO., LTD.



版权所有 © 苏州市振旺光电有限公司 2015-2035。保留一切权利。

非经本公司许可，任何组织和个人不得擅自摘抄、复制本文档内容的部分或者全部，并不得以任何形式传播。

注意

由于产品版本升级或其他原因，本文档内容会不定期进行更新。除非另有约定，本文档仅作为使用指导，本文档中的所有陈述、信息和建议不构成任何明示或暗示的担保。

Copyright © ZWO Co., Ltd. 2015–2025. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of ZWO Co., Ltd

Note

Due to product version upgrades or other reasons, the contents of this document are not regularly updated. Unless otherwise agreed, this document is intended as a guide only and all statements, information and recommendations in this document do not constitute any guarantee, expressed or implied.




SUZHOU ZWO CO., LTD.



Chapter 1: Sensor of EFW

 
We use the light sensor inside the EFW. The light sensor is used to determine the position of the holes. Therefore, if the light sensor has interference, the filter wheel will not work properly. Usually, the dust is the most common cause.



Chapter 2: How to make it

2.1 Prepare the tools.

An air blower and the screwdriver.

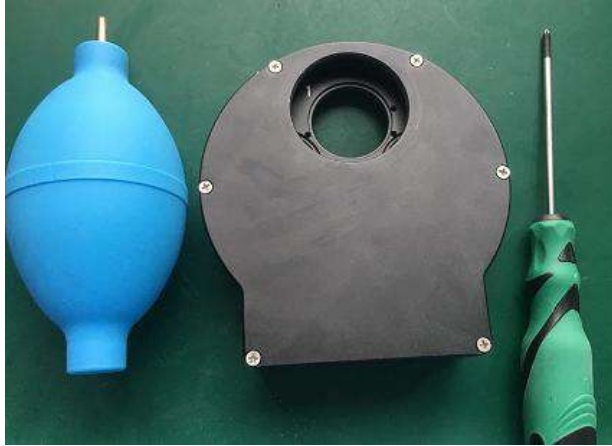

2.2 Open the back cover.



Unscrew the 6 screws on the cover in counterclockwise.



2.3 Find the light sensor.

Move the wheel to the position 1 by hand. Near position 4, where the wheel overlaps with the board, there are two holes. Below the 2 small holes, there are 2 light sensors.

Rotate the position 1 a little to the right, and you can see one of the light sensors in picture 4.

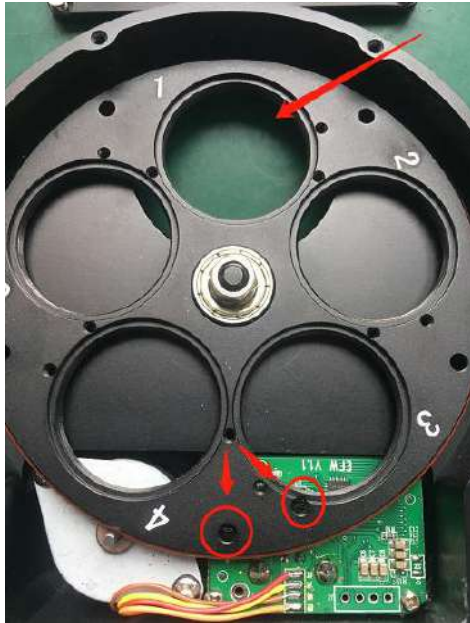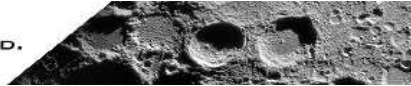

picture 3



picture 4

2.3 Clean it with an air blower.

Aim the air blower at the two sensors and clean them up.




2.4 Further step (optional)

For newer EFW, the filter wheel can also be removed for cleaning.

(For earlier versions of the EFW, the installation of the wheel is very complicated, so removing the filter wheel is forbidden.)

2.4.1 Can the wheel of my EFW be removed?

Three screws in the center of the wheel determine whether it can be removed.


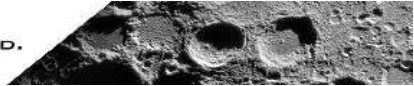


2.4.2 Three screws were unscrewed counterclockwise, take the wheel up.



2.4.3 Clean the light sensor and check the rubber ring on the wheel.

If the dust on the light sensor could not be cleaned by the air blower, you can also use a cotton swab dipped in alcohol to clean it.

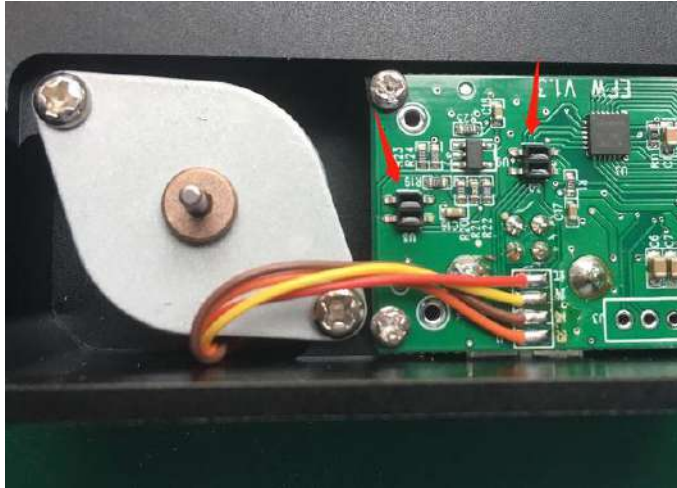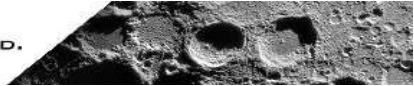


For the rubber ring, usually, there is no need to take it off from the wheel. Check its appearance, no breaks, cracks, or dents then it's good. Below shows you what a good rubber ring looks like.





SUZHOU ZWO CO., LTD.

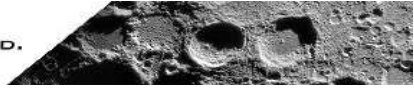

Chapter 3: After done

Please follow the reverse steps to install them back.



SUZHOU ZWO CO., LTD.



Chapter 4: Get support

Please send email to info@zwoptical.com for more information.