
Installing EAF



Step 1

Turn the telescope over and remove the Tension screw.

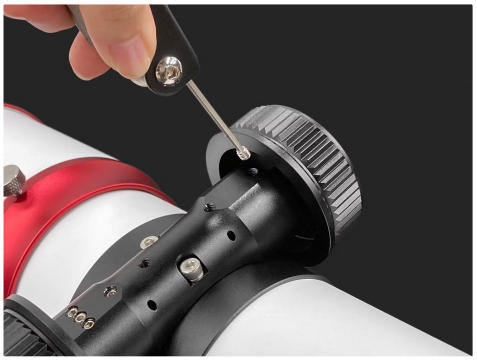

Step 2

Remove the top cover screw near the temperature gauge with 2mm Allen key.



Step 3

Release (don't remove) two inner knob screws.




Step 4


Remove the temperature gauge knob.



Step 5


Find the flat side on the shaft and turn it to face the hole.

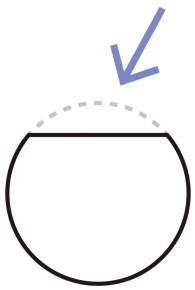

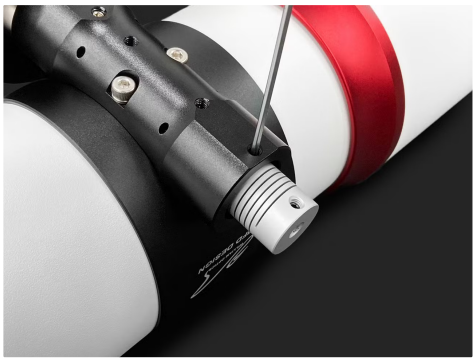

Step 6


Put the 5-6mm Flexible coupling on the shaft and lock the two inner screws.

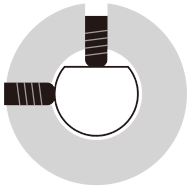



Step 7

Put the EAF body on and lock the two inner screws.

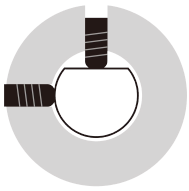


Please make sure one of the screws is lock on the flat side



Step 8

Align the screw holes.



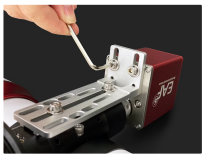

Step 9

Lock the four M4 bracket screws.