

Mighty-Cat 71

Updated Jul 2, 2026 • by WO Team ⌚ 18 min read





Lens Type	7 Elements EVO Petzval Design			
Focal Length	230 mm			
Diameter	71 mm			
Focal Ratio	f/3.2			
Image Circle	43.2 mm			
Focuser	WIFD R&P Focuser			
Focuser Travel Length	0-35 mm			
Adapter Included	Sensor Tilt Xterminator	Rotator	M54 Camera Adapter	M48 Camera Adapter
Optional Flattener	No Flattener Required			
Camera Format	Full Frame	APS-C	M4/3	
Total Weight	4.1 kg / 9.04 lbs			
OTA Weight	3.38 kg / 7.45 lbs			
Tube Length	315 mm			


Diagram Reports

[Learn how to read Diagram Reports](#)

Size Diagram

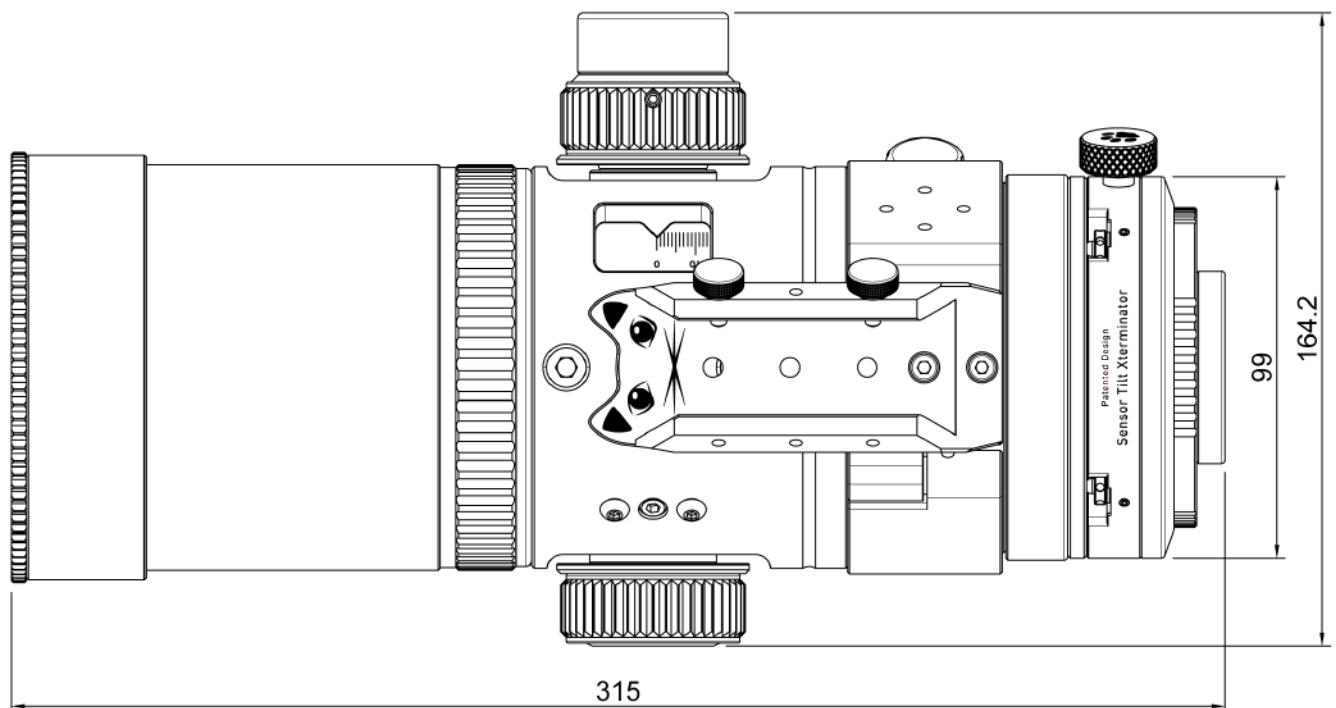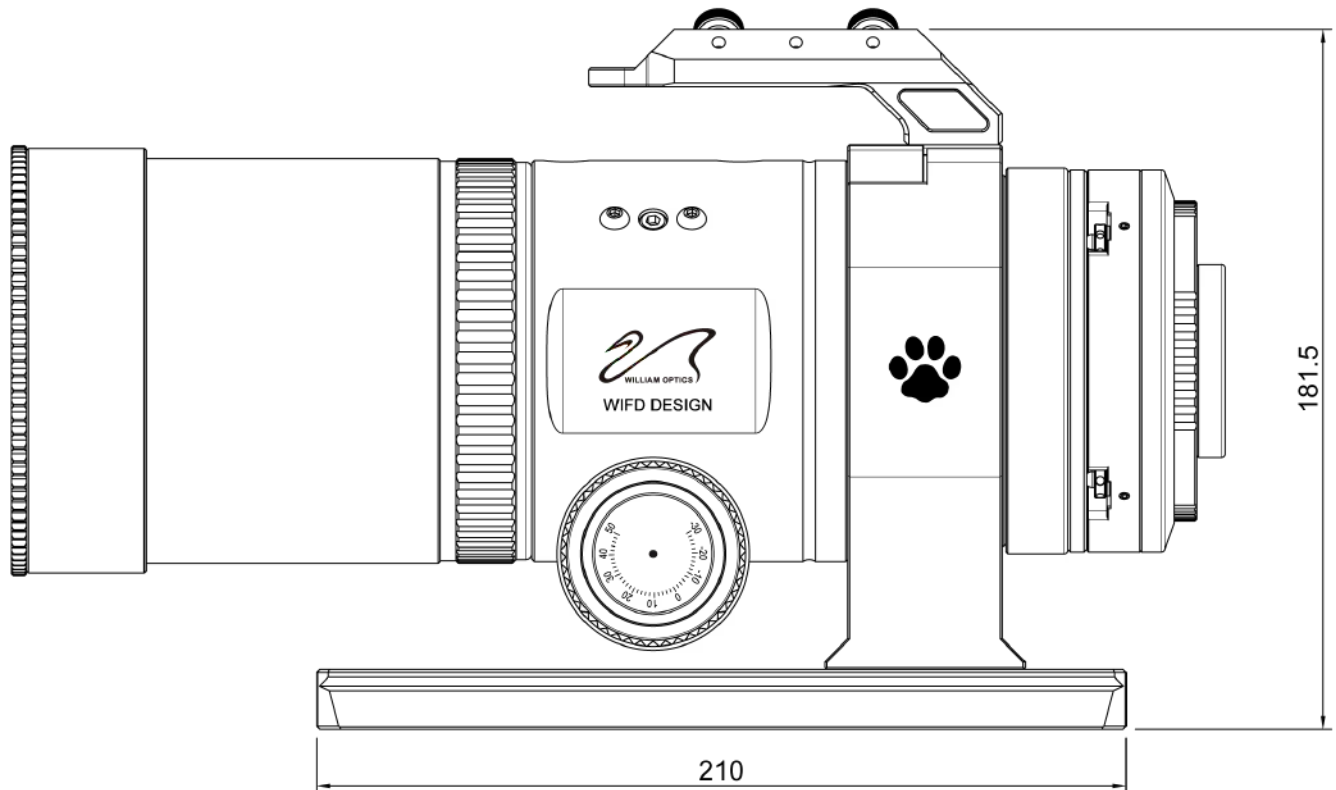

Parts

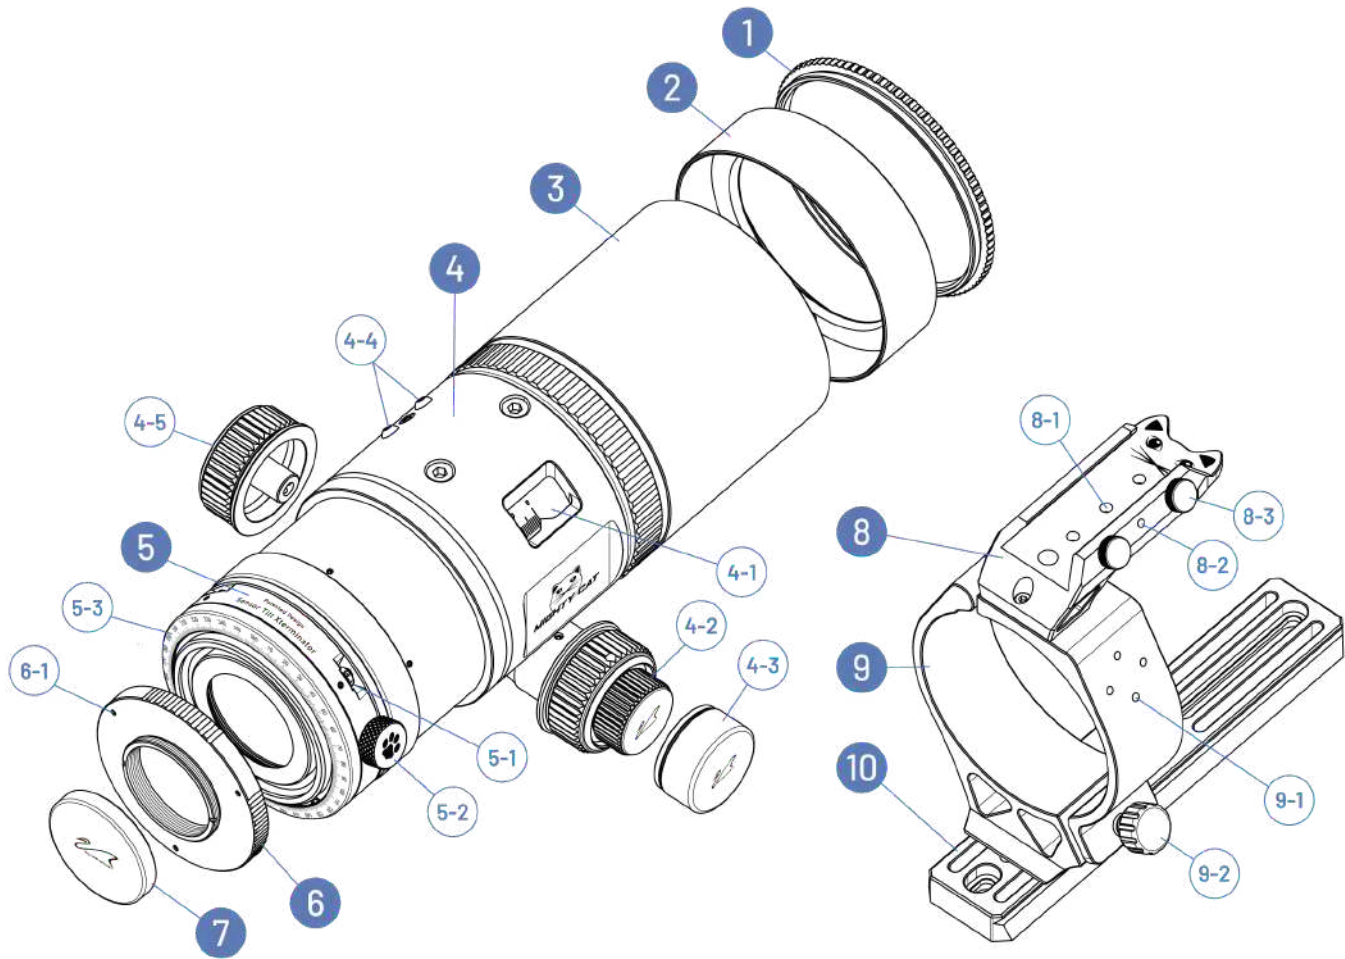

Front Bahtinov Mask Cover

Lens Cover with Bahtinov Mask

Dew Shield

WIFD Focuser [[Tension Adjustment Guide](#)]

Focus ruler scale window

Two Speed 1:10 Ratio Fine Knob

Fine Knob Protecting Cover

M4 Screw Holes for Finder Bracket

Focuser Knob with Temperature Gauge
(Can be removed to attach EAF) [[Installation Guide](#)]

Sensor Tilt Xterminator (STX-R) with
integrated Camera Rotator (CAA) [[Adjustment Guide](#)]

Handle Bar with Mini Vixen-style Mounting
Base ([HCRC](#))

M6 Screw Holes

M4 Screw Holes For Locking Screws

Mounting Base Locking Screws (M4)

Mounting Ring

M4 Screw Holes for Finder Bracket

Mounting Ring Knob

210mm Dual side Dovetail Plate (Vixen-style
& Arca Swiss Type) ([PRC210-Light](#))

STX Adjustment Knob

CAA Locking Knob (M8*1.0)

(Can be replaced with the **H4 set screw**
when using an off-axis guide system)

CAA 360° engraved scale

M79 → M48 Adapter (M79 → M54 Adapter
interchangeable) [[Replacement Guide](#)]

H1.5 Set screws to secure the adapter to
CAA

M48 (M54) Rear Dust Cap

Hardware Parts

Code Name	Image	Quantity	Usage
M4K12/10		2	Secure the guider to the handlebar
M8H4/12		1	Replacement for CAA locking knob (in case of interference with accessories)

Operation Guide

Camera Adapter Replacement



Tighten the **CAA Locking Knob** securely.



Loosen the **three set screws** on the adapter with a 1.5 mm hex key.



Rotate the adapter **counterclockwise** to remove it



Install the replacement adapter by reversing the above procedure.

Note

Three set screws are integrated into the adapter to control its connection to the CAA rotation mechanism.

- Tightening the screws allows the adapter and CAA to rotate as a single assembly
- Loosening them enables independent removal of the adapter.

Sensor Tilt Adjustment (STX-R)

Locate the pair of **diagonally opposing screws** corresponding to the affected corners.


Use 2mm hex key to **release (turn counterclockwise)** the **STX knob** near the corner **where the sensor is too far**.

Push out (turn clockwise) the opposite knob accordingly.

- **Make small adjustments** — turn each knobs only about 1/8 turn at a time, and avoid rotating any knob beyond a full 360°.
- **Use gentle pressure when turning** — overtightening may affect collimation or introduce unwanted stress.



Any **2mm rod or hex key** can be used to twist the knob mechanism.

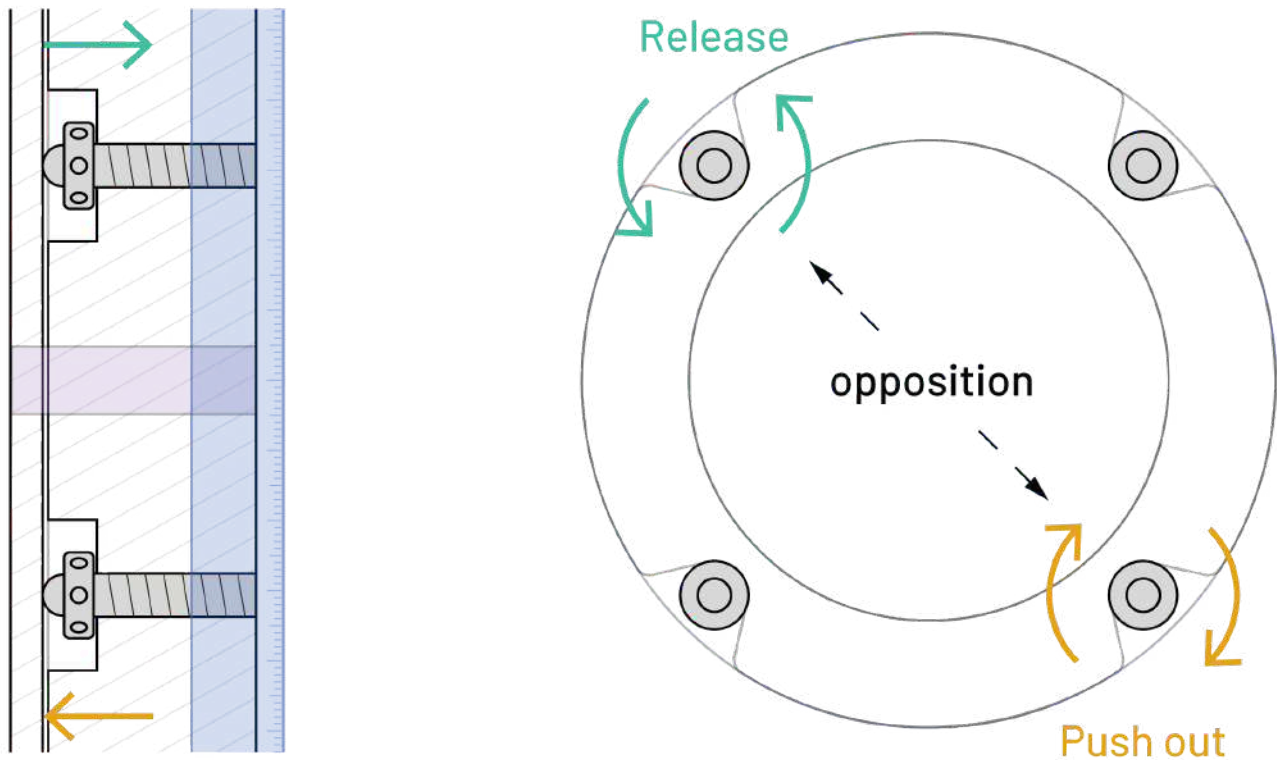

STX-R Adjustment

After each adjustment, **perform a test exposure** to check the star shape and alignment. Fine-tune as needed until the stars are round and sharp across the entire frame.

Tips & Notice


- **Perform adjustments in a stable environment** — wait for your optics and sensor to cool, and avoid large temperature fluctuations during testing.
- **Typical tilt tuning takes 2–4 test exposures.** Final adjustment needs may vary depending on your camera, filters, and backfocus configuration.
- **Tilt does not require frequent adjustment.** Once properly set, it should remain stable unless major components (e.g., camera, tilt plate, or spacing) are changed.
- **Lock the CAA knob before adjusting tilt** to ensure consistent and accurate results.
- **Do not overload the STX adjusters** — keep constant load under 4 kg and impact load under 2 kg to preserve mechanical precision.

Focuser Tension Adjustment

William Optics focusers are typically smooth and ready to use without any adjustment. For larger telescopes, tightening the **Quick Tension Adjustment Knob** can help prevent tube slippage. Other than this, we recommend not touching any screws on the focuser. If adjustment is necessary, please consult a qualified technician.

There's two side to build WIFD focuser tension:

BOTTOM / Rack & Pinion Gear

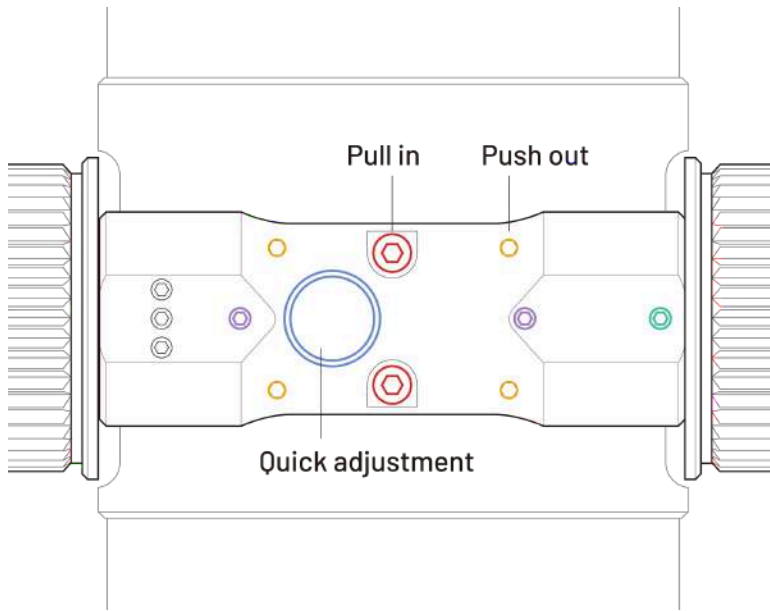

Quick tension adjustment knob

Smoothness adjustment

- Pull in (3mm Hex)

Smoothness adjustment

- Push out (2mm Hex)

Please Don't Touch

Top cover screw

Can be removed to attach the electronic devices such as EAF (refer to [Installing EAF](#)) or be used as a spare.


Telescope models from June 2025 no longer include the top cover screw.

TOP / Focuser Draw Tube

Focuser Draw Tube Tension Screws

Please Don't Touch

Guider/Finder bracket mounting screws
(2.5mm Hex)

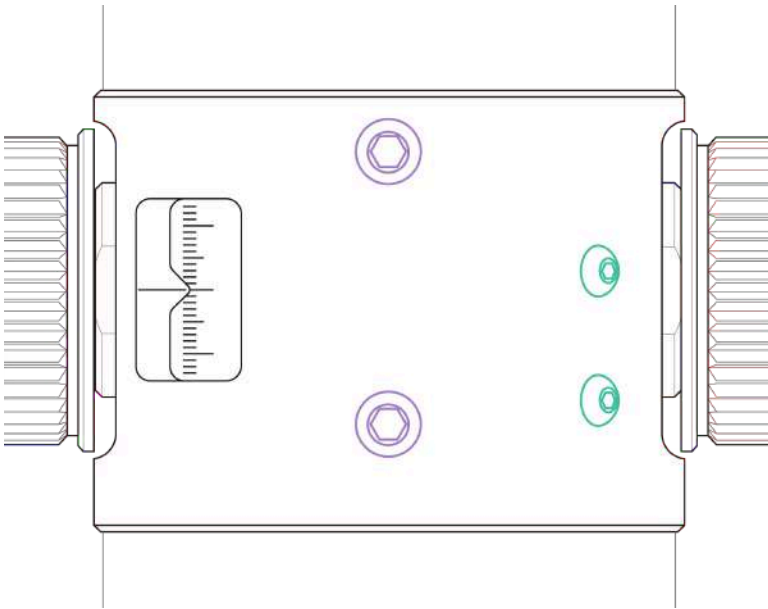


Notice

- When operating the telescope with a **motorized focuser**, **do not overtighten the focuser tension**. Excessive tension may damage the focuser mechanism.
- Make small and slow adjustments. Do not turn anything too much at once.

Back Spacing Range on Petzval Systems

Petzval telescopes do not rely on a single, exact back focus distance. Instead, they are designed to reach focus within a supported **back spacing range**, providing flexibility when using different cameras and accessories.

As long as the complete camera setup falls within this range, the focuser can reach focus normally. If the setup goes beyond it, focus may no longer be achievable.

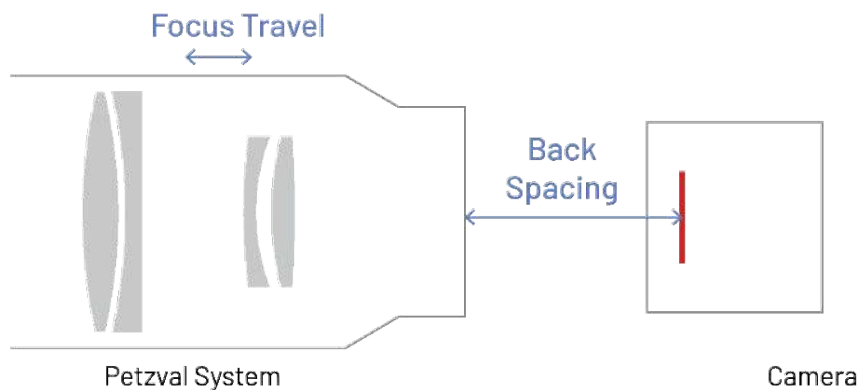

For astrophotography, a **back spacing of 55 ± 3 mm is recommended** to limit drawtube extension and reduce the risk of light leakage.

For more details on back spacing, see the support article [Back Spacing Range on Petzval Systems](https://support.williamoptics.com/products/mighty-cat-71)

Installing EAF



Turn the telescope over and remove the Tension screw.



Remove the top cover screw near the temperature gauge with 2mm Allen key.

Starting from June 2025, new telescope models no longer include the top cover screw. (Skip Step 2)



Release (don't remove) two inner knob screws.



Remove the temperature gauge knob.



Find the flat side on the shaft and turn it to face the hole.




Put the 5-6mm Flexible coupling on the shaft and lock the two inner screws.



Put the EAF body on and lock the two inner screws.

On Step 6 & 7:

Please make sure one of the screws is lock on the flat side (D-cut profile)

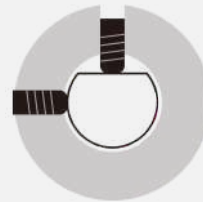




Align the screw holes.



Lock the four M4 bracket screws.

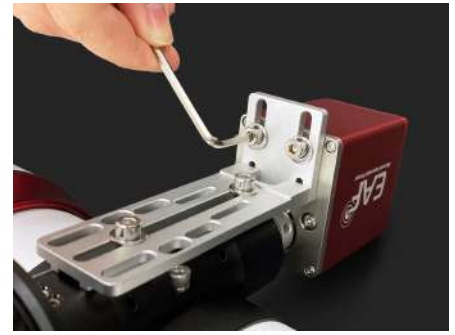

Installing Off-axis Guide System



When installing an off-axis guiding system, the **CAA Locking Knob** may interfere when rotating the camera. In this case, you can replace it with the included **H4 set screw** to avoid the conflict.



Care & Safety Instructions

Solar Safety Warning

Never point your telescope or finder scope at the Sun **without a proper solar filter securely mounted to the front of the telescope.**

Even a brief, unfiltered glimpse of the Sun can **permanently damage your eyes or your camera's image sensor.**

- Use only **front-mounted solar filters** made by **trusted manufacturers**. These filters must cover the **front of the telescope's dew shield** securely.



- **Do not use solar eyepiece filters.** They are unsafe and can fail under sunlight.

With the correct solar filter in place, you can safely observe and photograph the Sun without damaging your eyes, your camera, or your telescope.

Telescope Care & Storage

To preserve the optical quality and lifespan of your William Optics telescope, please follow these essential care and storage practices:

- **Allow time to acclimate**

After use, let the telescope adjust to room temperature before storage. During this period, keep the optical tube **open and uncovered** to allow moisture to evaporate naturally.

- **Ensure dryness**

Make sure the entire telescope is **completely dry**, especially the optics and interior tube, and **free of dew or moisture** before putting it away.

- **Use proper storage conditions**

Store your telescope in a **dry, dust-free environment** with a **stable temperature**. Avoid high heat or humidity. Dehumidifiers or silica gel are recommended for long-term protection.

- **Prevent dust accumulation**

Always place **dust caps** on both ends when not in use, or cover the telescope with a clean plastic sheet if it's not stored in a case.


Following these steps will help maintain optimal performance and prevent damage to sensitive components such as lenses, mirrors, and coatings.

For a detailed cleaning and maintenance guide, please refer to the full article: [Cleaning and Maintenance of Telescopes](#)

Clearance Around WIFD Focuser

To avoid interference between the focuser knobs and the mount, make sure the telescope is properly aligned on the mounting rings.

Loosen the rings slightly and adjust the telescope position so that **both focuser knobs are level and parallel to the mount**. This ensures sufficient clearance from the saddle plate and prevents accidental contact or obstruction during use.

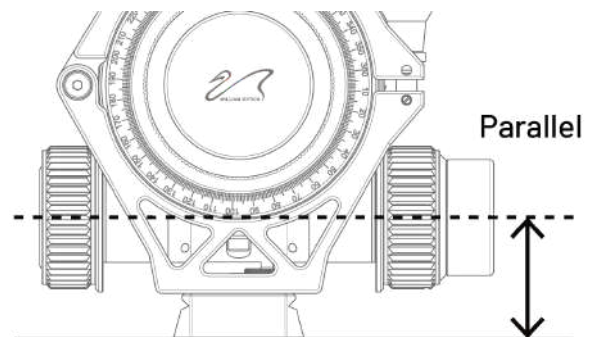

Accessories Map

CAMERA ADAPTER

UNIGUIDE 50MM F/4.0



ZWO EAF MOUNTING BRACKET



RED DOT FINDER KIT



LOSMANDY-STYLE DOVETAIL PLATE



