


THE SUPERIOR LENS CLEANING SYSTEM FOR ALL LENS FILTERS

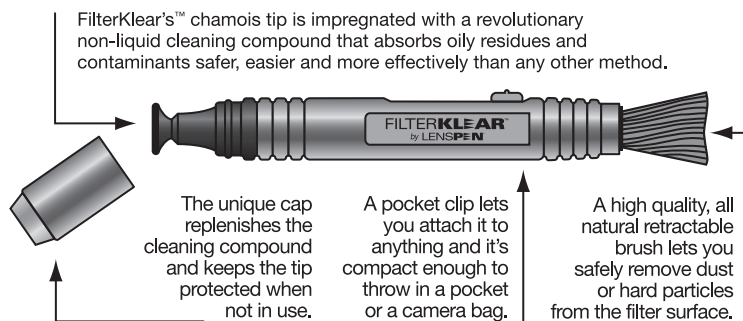

Wads of tissue, leaky fluid bottles & grimy optical cloths are a thing of the past!

- 1** Extend retractable brush and wipe away any dust or particles of grit.
- 2** Remove cap to expose cleaning tip. Wipe away any smudges with a smooth, circular motion.
- 3** Replace cap and turn half way to replenish the non-liquid cleaning compound.

NOTE: In cases of hardened deposits, breathe lightly on the filter, then wipe off completely with LensPen® FilterKlear.™ Do not use on wet or polarized surfaces. The quality filter cleaning instrument is manufactured in a "clean room" environment to assure that the cleaning tip of LensPen® FilterKlear™ is free of any unwanted hard particles when purchased. For maximum performance and safety to the filter, use LensPen® FilterKlear™ according to instructions provided.

FILTERKLEAR™ by LENS PEN®