


THE SUPERIOR LENS CLEANING SYSTEM FOR APS® CAMERAS, DIGITAL CAMERAS, POCKET BINOCULARS AND SMALL EYE PIECES

LensPen MiniProII's chamois tip is impregnated with a revolutionary non-liquid cleaning compound that absorbs oily residues and contaminants safer, easier and more effectively than any other method.

**COMPACT
DESIGN**

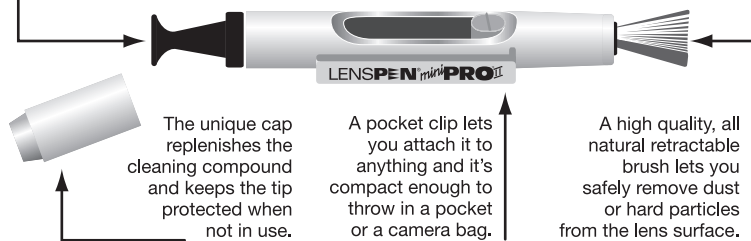

Wads of tissue, leaky fluid bottles & grimy optical cloths are a thing of the past!

- 1** Extend retractable brush and wipe away any dust or particles of grit.
- 2** Remove cap to expose cleaning tip. Wipe away any smudges with a smooth, circular motion.
- 3** Replace cap and turn half way to replenish the non-liquid cleaning compound.

NOTE: In cases of hardened deposits, breathe lightly on the lens, then wipe off completely with LensPen MiniProII.

The quality lens cleaning instrument is manufactured in a "clean room" environment to assure that the cleaning tip of LensPen MiniProII is free of any unwanted hard particles when purchased. For maximum performance and safety to the lens, use LensPen MiniProII according to instructions provided.

LENSPEN® mini PRO II