

ATR3CMOS01700KPA User Manual

Version 1.0
Aug 2023



All materials related to this publication are subject to change without notice and its copyright totally belongs to ToupTek Photonics.

Please download the latest version from touptek-astro.com.

Contents

ATR3CMOS01700KPA User Manual	1
1 Description and Features	1
2 ATR3CMOS01700KPA Specifications and Performance	1
2.1 Camera Specifications	1
2.2 Sony IMX432 Sensitivity	1
2.3 12bit ADC and ROI	2
2.4 DDR3 Buffer	2
2.5 Binning	2
2.6 Conversion Gain Switch	2
2.7 Power and Cooling System for Precise Temperature Regulation	2
2.8 Camera Performance Analysis	3
3 Product Package and Connections	8
3.1 Packing List	8
3.2 Camera Dimension and Its Mount	9
3.3 Camera Outline and Interface	9
3.4 Camera Mechanical Connection with Adapter	10
3.5 Camera Mechanical Connection with Lens	11
3.6 Camera Electric Connection with Accessories	11
4 ATR3CMOS01700KPA and Its Software	13
4.1 Application Installation	13
4.1.1 User-friendly UI Design	13
4.1.2 Professional Camera Control Panel	14
4.1.3 Practical Functions with Good Results	14
4.1.4 Powerful Compatibility	15
4.1.5 Hardware Requirement	15
4.2 ATR3CMOS01700KPA and Dshow	15
4.3 ATR3CMOS01700KPA and the 3 rd Party Software	15
4.3.1 Support Software	15
4.3.2 ASCOM Platform	15
4.3.3 PHD Guiding	16
4.3.4 Nebulosity	16
4.3.5 MetaGuide	16
4.3.6 MAXIMDL	16
4.3.7 AstroArt	16
4.3.8 FireCapture	16
4.3.9 SharpCAP	16
4.3.10 Registax	16
4.3.11 AstroStack	16
4.3.12 DeepSky Stacker	16
5 Service	17

1 Description and Features

The ATR3CMOS01700KPA camera is designed specifically for astrophotography. It is mainly used for solar photo shooting, since the camera has cooled CMOS sensor, low readout noise. It can be also used for planetary photo shooting. Its extraordinary performance and extensive usage will give you great astrophotography experience.

The features of ATR3CMOS01700KPA are listed below:

- IMX 432 Color CMOS Sensor
- Resolution: 1600 x 1100
- 9.0 um Square Pixels
- 1.1-inch Optical Format
- 12-bit ADC
- 512 Mbyte Memory
- Precise Temperature Regulation
- G Sensitivity: 4910mv with 1/30s
- Low Noise: 2.4 to 20.2e-
- Support High Frame Rate Mode (109FPS at all Pixel Readout 12 bit)
- SNR Max: 50 dB
- Dynamic Range: 87 dB
- -35°C below ambient under short exposure/ -45°C under long exposure time(> 5s)

2 ATR3CMOS01700KPA Specifications and Performance

2.1 Camera Specifications

Table 1 ATR3CMOS01700KPA Technique Specifications.

Sensor	Sony IMX432 back illuminated sensor	
Diagonal	17.5 mm	
Image Resolution	1.76 mega pixels (1600*1100)	
Pixel Size	9.0μm × 9.0μm	
Image Area	14.4mm × 9.9mm	
Max FPS at Resolution (USB 3.0)	12bit	8bit
	109 FPS @ 1600*1100	120 FPS @ 1600*1100
Max FPS at Resolution (USB 2.0)	12bit	8bit
	10.9 FPS @ 1600*1100	18.8 FPS @ 1600*1100
Shutter Type	Global shutter	
Exposure Time	0.1ms – 3600s	
Gain	1x – 100x	
SNR	50 dB	
Dynamic Range	74 dB	
Read Noise	2.4 – 20.2 e-	
QE Peak	>79%	
Full Well	100ke-	
ADC	12bit	
DDR3 Buffer	512MB (4Gb)	
Connection Port	USB3.0/USB2.0	
Camera Adaptor	M42 × 0.75mm	
Protect Windows	IR-cut filter/AR-window	
Spectral Range	380-690nm (with IR-cut filter)	
Capture/Control SDK	Windows/Linux/macOS/Android Multiple Platform SDK(Native C/C++, C#/VB.NET, Python, Java, DirectShow, Twain, etc.);	
Recording System	Still picture and movie	
Camera Dimensions	Diameter 80mm * height 103mm	
Camera Weight	0.552kg	
Back Focus Distance	17.5mm	
Cooling:	Two stage TEC	
Effective Cooling Temp:	-35°C below ambient under short exposure/ -45°C under long exposure(> 5s)	
Supported OS	Microsoft® Windows® XP / Vista / 7 / 8 /10 (32 & 64 bit) OSx(Mac OS X) Linux	

2.2 Sony IMX432 Sensitivity

The sensor G Sensitivity of ATR3CMOS01700KPA is 4910mv with 1/30s. Its spectral sensitivity is shown in Figure 1.

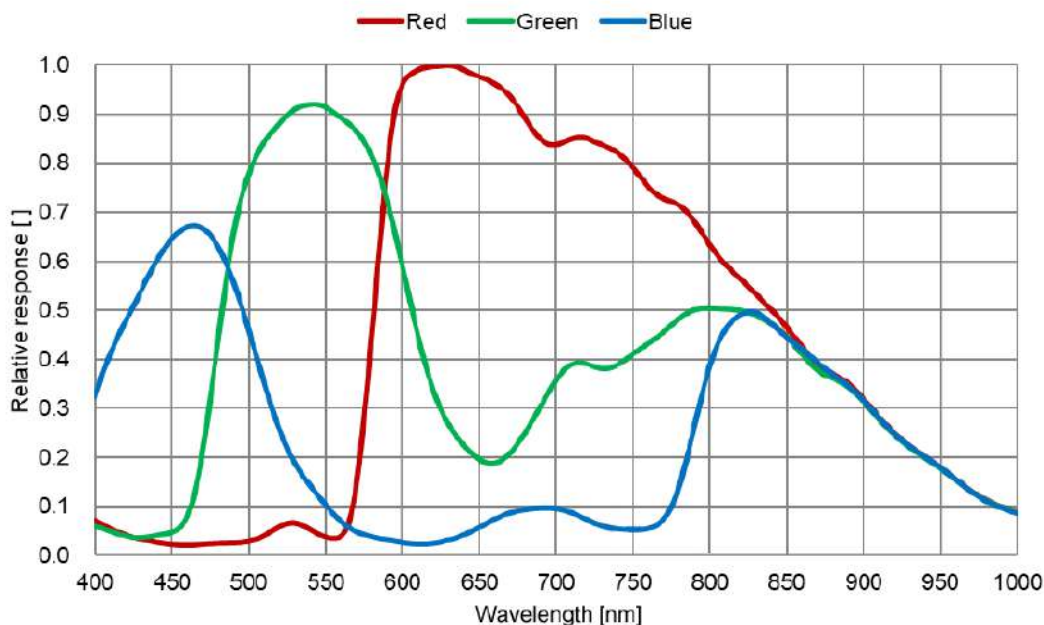


Figure 1 IMX432 Spectral Sensitivity Characteristic

2.3 12bit ADC and ROI

The ATR3CMOS01700KPA has built in 12bit ADC. The camera also supports hardware ROI, and the smaller the ROI size is, the higher the frame rate is.

Table 2 shows the frame rate of the ATR3CMOS01700KPA in 12/8bit mode, USB3.0 / USB2.0 data transfer interface at different resolutions:

Table 2 ATR3CMOS01700KPA Frame Rate at Different Resolution/Data Bit/Data Transfer (USB3.0/ USB2.0)

Resolution	FPS	Bit & Interface	14bit ADC		8bit ADC	
			USB3.0	USB2.0	USB 3.0	USB 2.0
1600 * 1100			109	10.9	120	18.8

2.4 DDR3 Buffer

ATR3CMOS01700KPA camera has a 512MB (4Gb) DDR3 buffer, which helps maintain the stability of data transmission, and effectively reduce the amp-glow caused because image data can be temporarily buffered without being sent hastily to the receiver.

2.5 Binning

The ATR3CMOS01700KPA supports digital binning from 1×1 to 8×8 in either stacking or averaging method.

2.6 Conversion Gain Switch

ATR3CMOS01700KPA support [HCG](#) and [LCG](#) mode switch, the Gain ratio is 5.06.

2.7 Power and Cooling System for Precise Temperature Regulation

The Camera can be powered by DC12V 3A power source. Please remember that when the power adaptor is plugged in, cooling system and image process system are both powered by DC 12V port, otherwise, image process system is powered by USB port while cooling system is off.

The cooling system of ATR3CMOS01700KPA is two-stage **Thermoelectric Cooling** (TEC) with controllable electric fan assisting heat dissipation.

The TEC system is controlled by PID algorithm, which allows the TEC to be precisely regulated towards the target temperature with 0.1°C deviation.

The working temperature can be regulated to specific number, and effective temperature drop can be -40°C from ambient temperature. Such efficient cooling system guarantees the stability of ultra-low noise mode and quality of the camera image.

2.8 Camera Performance Analysis

Camera performance can be evaluated with **e-/ADU**, **Read Noise**, **Full Well** and **Dynamic Range**.

e-/ADU: The sensors found in cameras used for vision applications have pixels that convert incoming photons into electrons. Gain on a CCD /CMOS camera represents the conversion factor from electrons (e-) into digital counts, or **Analog-Digital Units (ADUs)**. Gain is expressed as the number of electrons that get converted into a digital number, or electrons per ADU (**e-/ADU**).

Read Noise: Read Noise is the most important reference to measure the performance of a camera. Lower read noise usually means better SNR and better quality of image. **Read Noise** is created within the camera electronics during the readout process as the electrons are subjected to the analog to digital conversion, amplification and processing steps that enable an image to be produced.

Full Well: The electrons are held in each pixel and are converted into electrical charge which can be measured to show the amount of light that has fallen on each pixel. The maximum electrical charge possible is termed "**full well capacity**". Under the same conditions such as noise and A/D converter quality, the greater full well capacity a sensor has, the wider dynamic range the sensor has. As there is a limit to the depth to which pixels can be made, the full well capacity is often proportional to the frontal area of the light gathering element of the pixel.

Dynamic Range is the ratio between the maximum output signal level and the noise floor at minimum signal amplification (noise floor which is the RMS (root mean square) noise level in a black image). The noise floor of the camera contains sensor readout noise, camera processing noise and the dark current shot noise. **Dynamic range** represents the camera's ability to display/reproduce the brightest and darkest portions of the image and how many variations in between. This is technically intra-scene dynamic range. Within one image there may be a portion that is in complete black and a portion that is completely saturated.

For the ATR3CMOS series camera, the **Gain Value** is in xxx% mode. Here xxx is used as the x axis (**Gain Value**) for the description of the camera performance

$$Rel\ Gain(dB) = 20 * \log_{10}[xxx(Gain\ Value)/100]$$

$$xxx(Gain\ Value) = 100 \times 10^{(Rel\ Gain(dB)/20)}$$

Read noise is the most important reference to measure the performance of a camera. Lower read noise usually means better SNR and better quality of image.

Camera setting used for performance analysis is shown below:

- Full resolution
- RAW 12-bit mode
- Temperature: -10°C
- HCG

Figure 2 shows the curves of the camera analysis data in Table 3

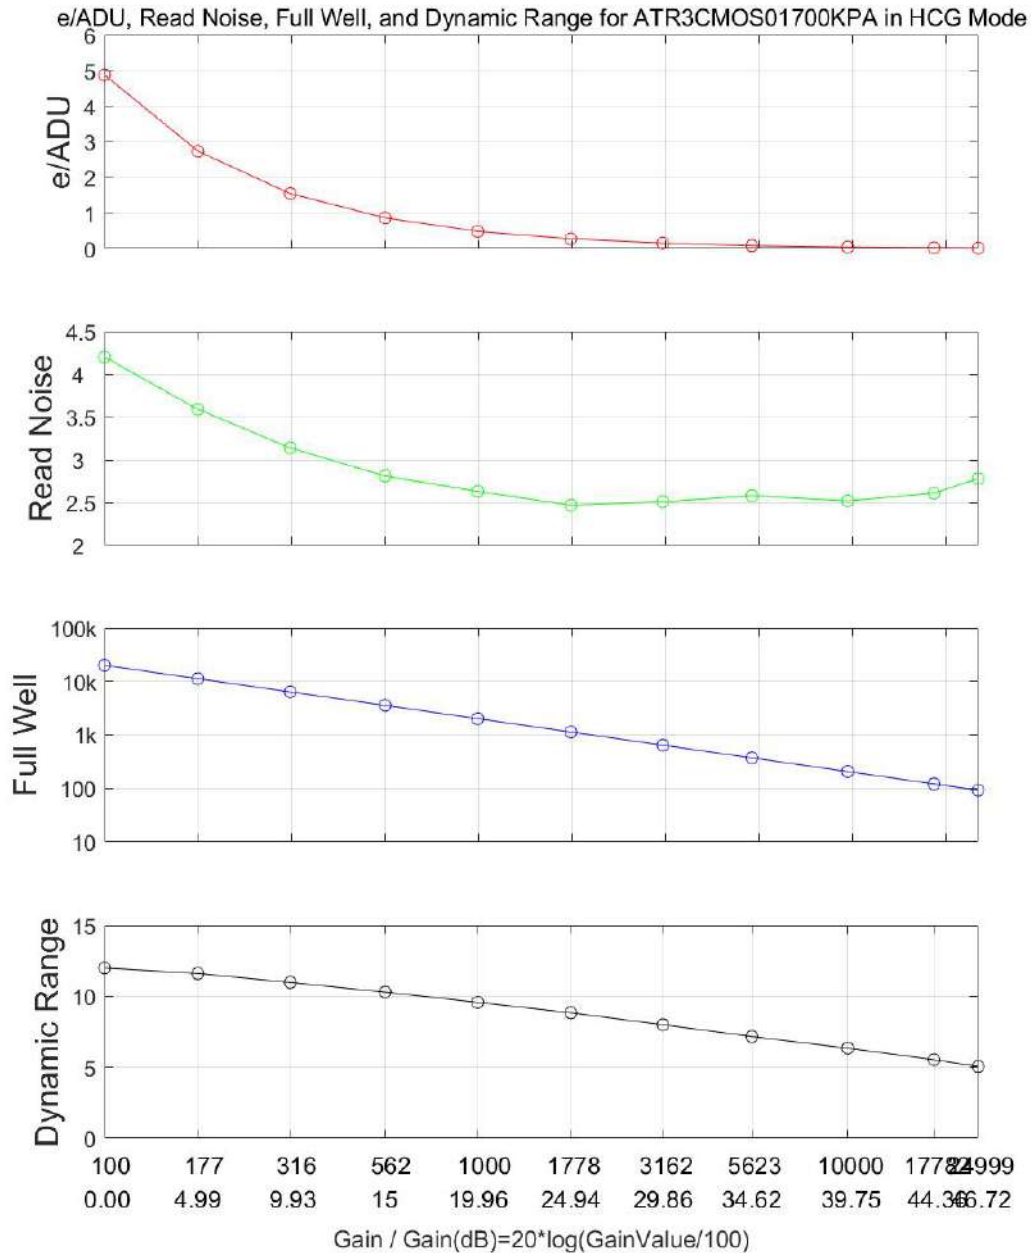


Figure 2 e/ADU, Read Noise, Full Well and Dynamic Range for ATR3CMOS01700KPA

The camera analysis data is shown in Table 3:

Table 3 Camera Analysis Data

Sensor Analysis Data											
Gain Value	100	177	316	562	1000	1778	3162	5623	10000	17782	24999
Rel Gain (dB)	0.00	4.99	9.93	15	19.96	24.94	29.86	34.62	39.75	44.36	46.72
e-/ADU	4.88	2.74	1.55	0.87	0.49	0.28	0.16	0.09	0.05	0.03	0.02
Read Noise (e-)	4.2	3.59	3.14	2.81	2.63	2.47	2.51	2.58	2.52	2.61	2.78
Full Well (ke-)	20	11.2	6	3.6	2	1.1	0.6	0.4	0.2	0.1	0.09
Dynamic Range (stop)	12	11.61	10.98	10.3	9.57	8.84	8	7.17	6.35	5.53	5.05

Camera setting used for performance analysis is shown below:

- Full resolution
- RAW 12-bit mode
- Temperature: -10°C
- LCG

Figure 3 shows the curves of the camera analysis data in Table 4

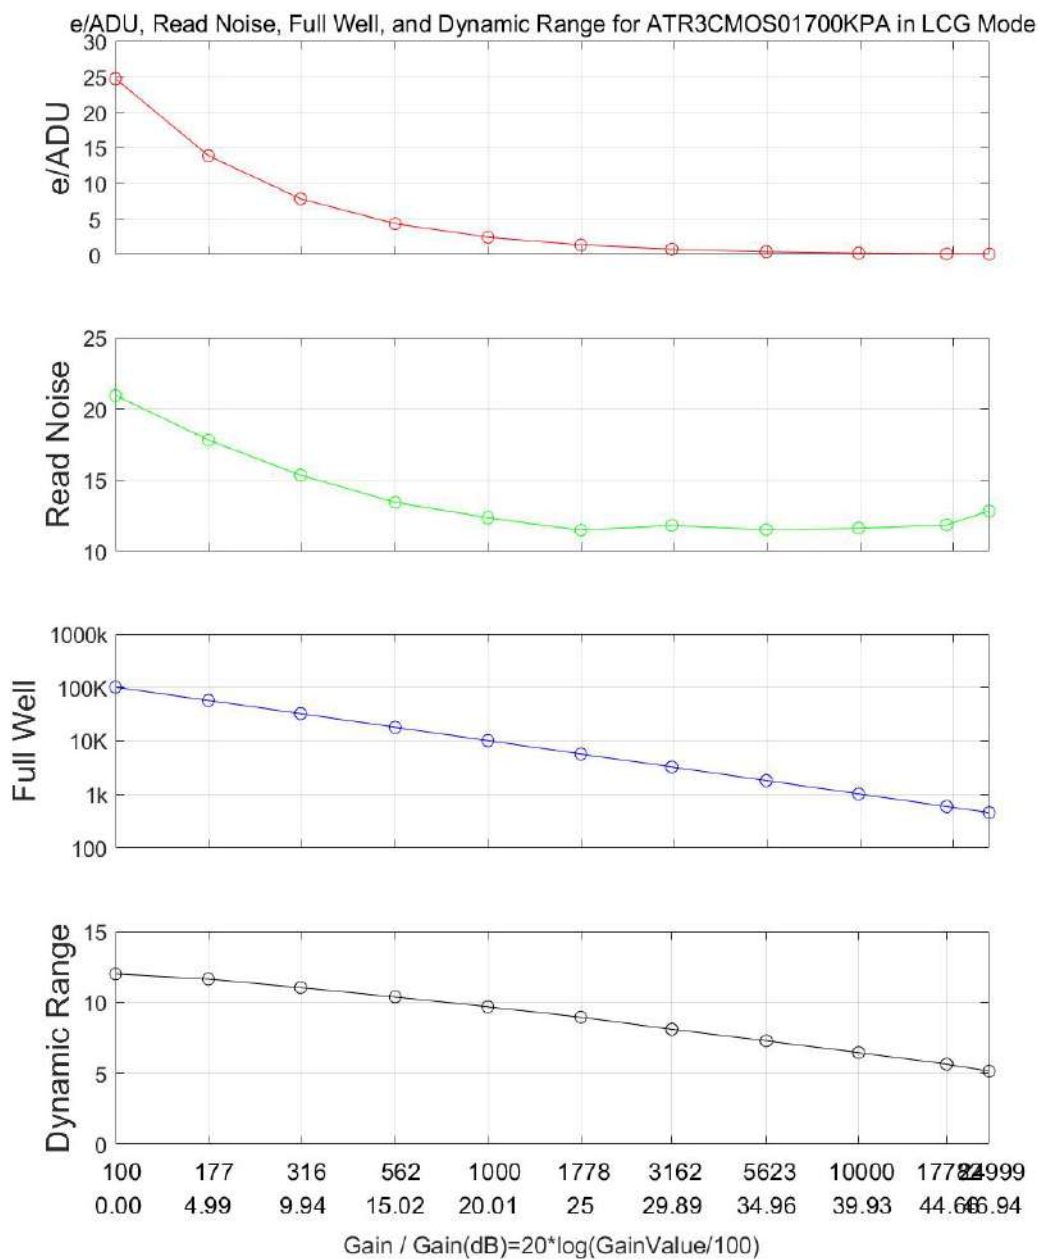


Figure 3 e/ADU, Read Noise, Full Well and Dynamic Range for ATR3CMOS01700KPA

The camera analysis data is shown in Table 4:

Table 4 Camera Analysis Data

Sensor Analysis Data											
Gain Value	100	177	316	562	1000	1778	3162	5623	10000	17782	24999
Rel Gain (dB)	0.00	4.99	9.94	15.02	20.01	25	29.89	34.96	39.93	44.66	46.94
e-/ADU	24.7	13.91	7.86	4.38	2.47	1.39	0.79	0.44	0.25	0.14	0.11
Read Noise (e-)	20.93	17.81	15.34	13.44	12.35	11.49	11.82	11.52	11.62	11.86	12.83
Full Well (ke-)	101	57	32	18	10	5.7	3.2	1.8	1.0	0.6	0.5
Dynamic Range (stop)	12	11.64	11.04	10.38	9.68	8.95	8.1	7.29	6.46	5.64	5.15

3 Product Package and Connections

3.1 Packing List



Figure 4 Packing Information of ATR3CMOS01700KPA

Table 5 ATR3CMOS01700KPA Packing List

Standard Package	
A	Carton L:50cm W:30cm H:30cm (20pcs, 12~17Kg/ carton, 0.045m ³), not shown in the photo
B	3-A safety equipment case: L:28cm W:23cm H:15cm (1pcs, 3.9Kg/ box); carton size: L:28.2cm W:16.7cm H:25.5cm(TBD)
C	ATR3CMOS series camera (M42x0.75 Mount+2" adapter)
D	Power adapter: input: AC 100~240V 50Hz/60Hz, output: DC 12V 5A
E	High-Speed USB3.0 A male to B male gold-plated connectors cable /1.5m
F	Drying tube
G	CD (Driver & utilities software, Ø12cm)
H	M48M-M48F 16.5mm extender(TBD)
I	M48M-M42F adapter(TBD)
Optional Accessories	

3.2 Camera Dimension and Its Mount

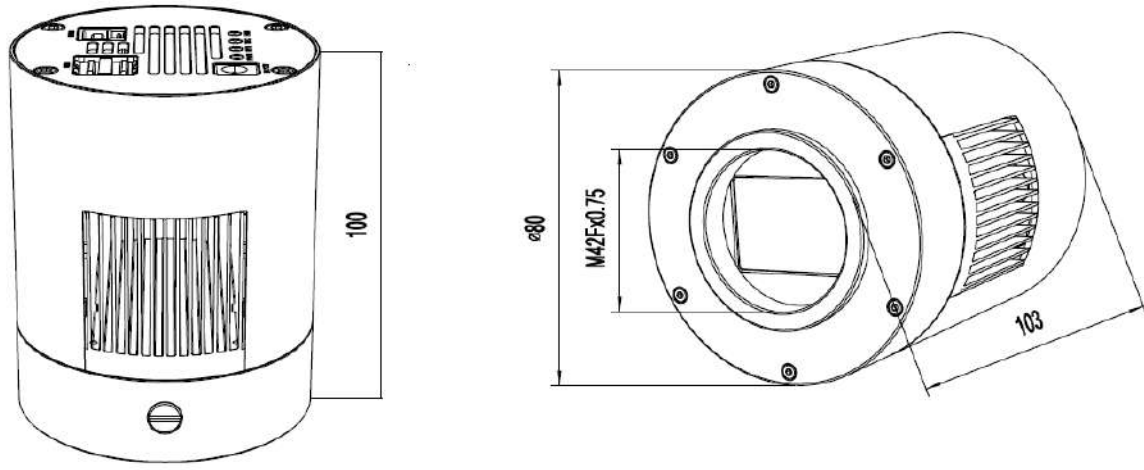


Figure 5 Dimension and Mount of ATR3CMOS01700KPA

Table 6 Dimension and Mount of ATR3CMOS01700KPA

Item	Specification
Diameter	Ø80mm
Height	100mm
Mount	M42F x 0.75mm

3.3 Camera Outline and Interface

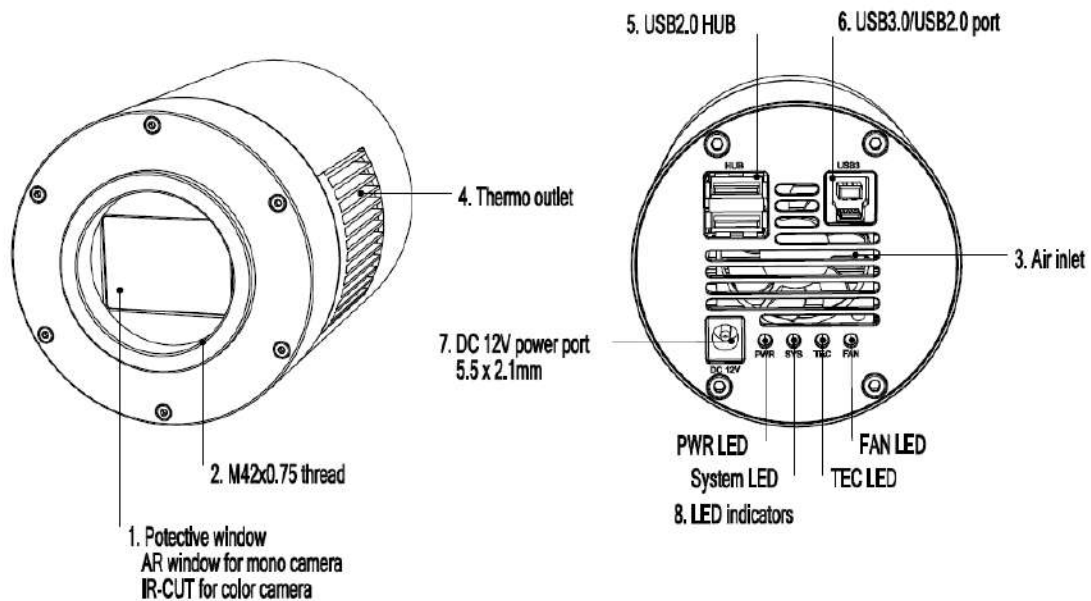


Figure 6 Camera Outline and Interface.

Table 7 Camera Outline and Interface List

Item	Specification
1	Protective window, AR window for mono camera, IR-cut filter for color camera
2	M42F × 0.75 thread
3	Air inlet
4	Thermo outlet or radiator
5	USB 2.0 HUB
6	USB 3.0/ USB 2.0 port
7	DC 12V 3A power port, 5.5 × 2.1mm
8	LED indicators: 1) Power LED. 2) System LED. 3)TEC LED. 4)Fan LED

3.4 Camera Mechanical Connection with Adapter

The ATR3CMOS01700KPA can be connected to a telescope with proper adapter, or the camera lens. The most common adapters are already included in the package, but we also provide some specific adaptors based on the requirement.

The female flange to the sensor is 17.5mm. The ATR3CMOS01700KPA comes with M42x0.75 mount and can connect to telescope with the M42x0.75 thread in a direct way.

The ATR3CMOS01700KPA can also connect to the telescope who use 1.25" or 2" eyepieces by M42M-1.25" or M42M-2" adapter. Figure 7 shows the connection of the camera and the adapter. After the adapter is screwed to the camera, the camera can insert into the telescope's eyepiece tube. Table 8 list the details of the camera and adapter parameters.

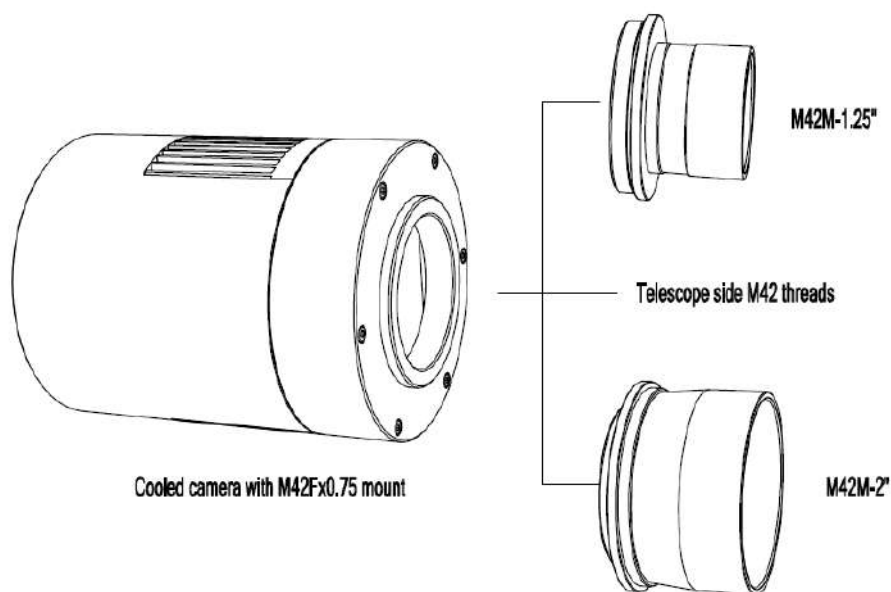


Figure 7 The Connection of the ATR3CMOS Camera and Adapter

Table 8 Camera and Its Adapter Connections

Item	Specification
Back Focal Distance	17.50mm
M42M-1.25" Adapter	M48M-1.25" adapter for 1.25" telescope
M42M-2" Adapter	M42M-2" adapter for 2" telescope

3.5 Camera Mechanical Connection with Lens

Figure 8 shows the connections of the ATR3CMOS camera and the lens. Table 9 list the connection's parameters.

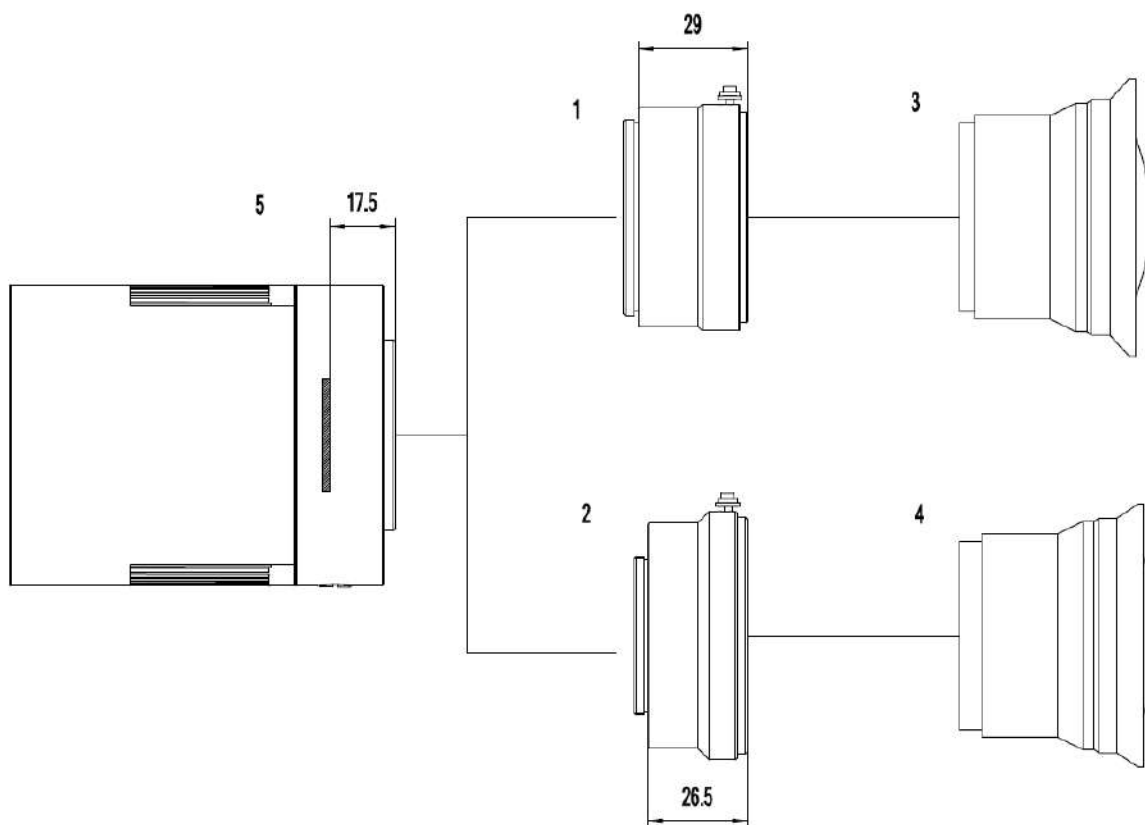


Figure 8 Nikon /Canon Lens with ATR3CMOS Camera

Table 9 Camera and Lens Connection

Item	Specification
1	Nikon-M42 adapter(TBD)
2	EOS-M42 adapter
3	Nikon lens
4	Canon lens
5	ATR3CMOS camera with M42Fx0.75 mount

3.6 Camera Electric Connection with Accessories

On the back side of ATR3CMOS01700KPA, there are 3 connection ports: DC 12V/3A power port, USB3.0/ USB2.0 port and USB-HUB.

The USB-HUB provides connection with other devices, which allows user to avoid the mess of cable management. Once another device is connected through the USB-HUB, it will be connected to PC device through the USB3.0/USB2.0 port.

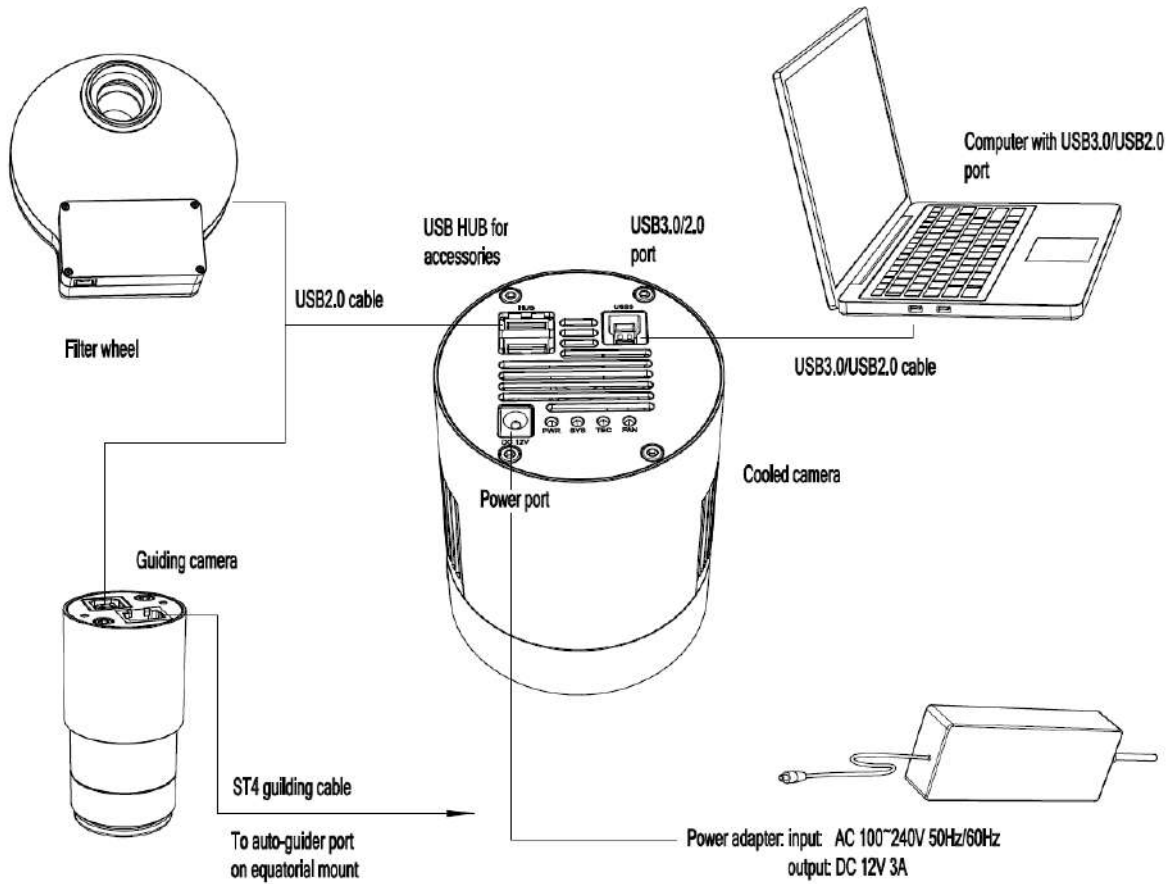


Figure 9 Camera Electric Connection

Table 10 Camera Electric Connection Details

Item	Specification
USB3.0/USB2.0 Port	To computer with USB3.0/USB2.0 cable
USB HUB for Accessories	To filter wheel with USB2.0 cable
	To guiding camera with USB 2.0 cable
Power Port	DC12V/3A

4 ATR3CMOS01700KPA and Its Software

4.1 Application Installation

For software, customers are welcomed to go to our software website: <https://touptek-astro.com/download/>, to download the latest ToupSky. The ATR3CMOS can also be used with ASCOM, DirectShow SDK. If the third-party software is compatible with these SDK, customers can also download the software driver from our website and install the drivers into the third-party software.

ToupSky is ToupTek astronomy camera's Windows application. ToupSky is a professional software integrated with camera control, image capture & process, image browse, and analysis functions. ToupSky is born with the following features:

Windows:

- x86: XP SP3 or above; CPU supports SSE2 instruction set or above
- x64: Win7 or above

Features

- Full control of the camera
- Trigger mode and video mode support (raw format or RGB format)
- Automatic capture and quick record function
- Multi-language support
- Hardware ROI and digital binning function
- Extensive image processing functions, like image stitching, live stacking, flat field correction, dark field correction, etc.

Supported Camera:

- All ToupTek astronomy cameras

4.1.1 User-friendly UI Design

- Well-arranged menus and toolbars ensure quick operating;
- The unique design of 3 sidebars -- **Camera**, **Folders**, **Undo/Redo** are orderly classified;
- Convenient operating method (Double click or right-click context menu) as much as possible;
- Detailed help manual;

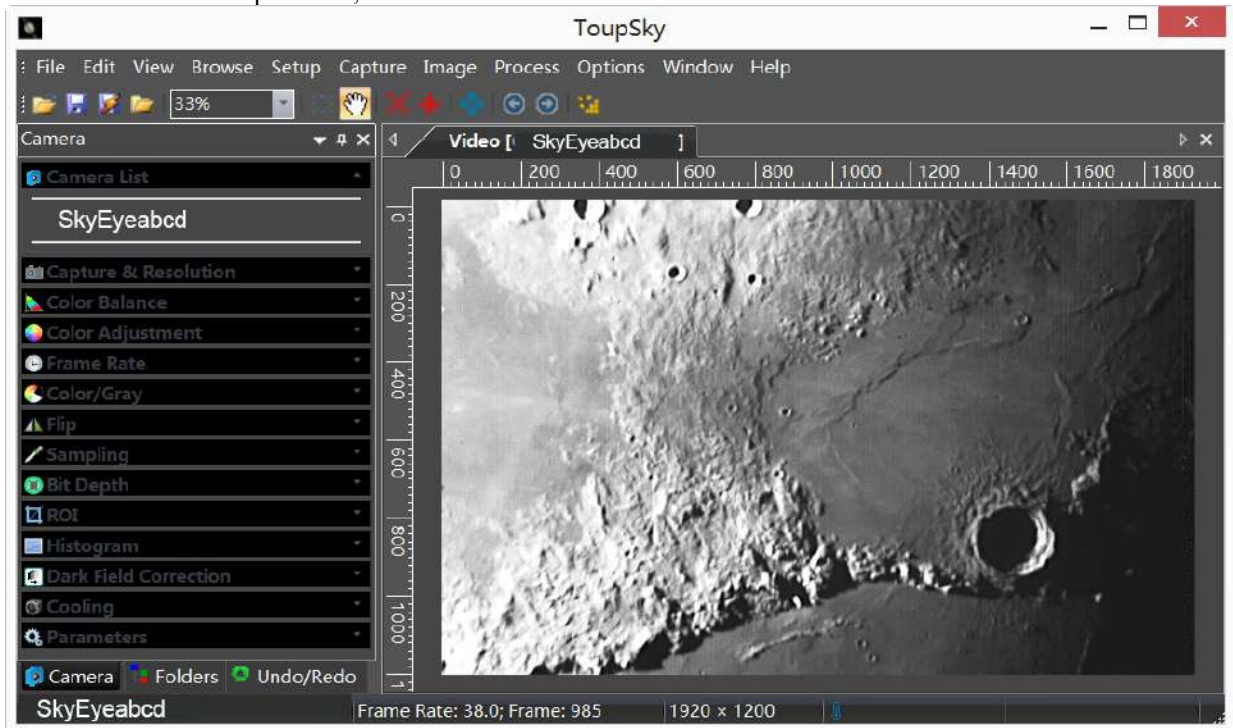


Figure 10 ToupSky and Its Video Window

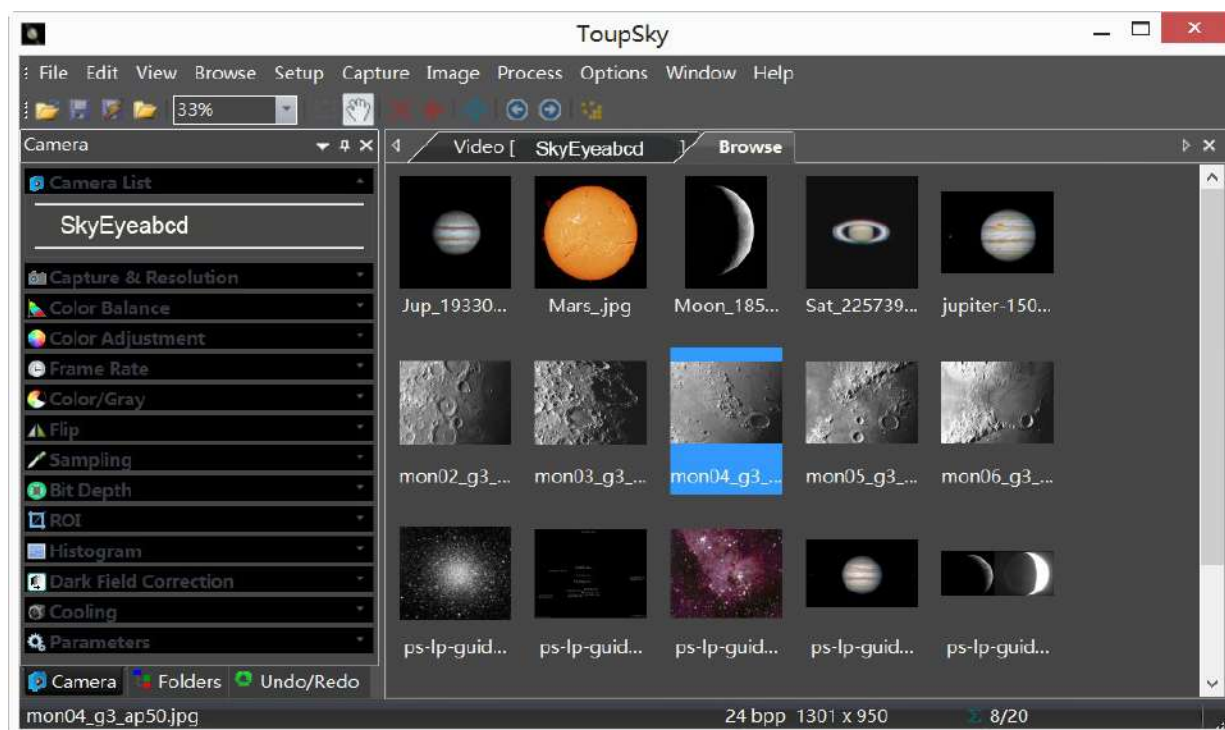


Figure 11 ToupSky and Its Browse Window

4.1.2 Professional Camera Control Panel

Capture & Resolution	Set the live and snap resolution and snap the image or record video;
Exposure & Gain	Auto exposure (exposure target preset) and manual exposure (exposure time can be inputted manually); Up to 5 times gain;
Color Balance	Advanced single-click intelligent white balance setting, temperature and tint can be manually adjusted;
Color Adjustment	Hue, saturation, brightness, contrast, gamma initialization adjustment;
Frame Rate	Adjustment of frame rate available for different computer configurations;
Flip	Check the “horizontal” or “vertical” option to correct the sample direction;
Sampling	Bin mode can obtain low noise video stream; Skip mode obtains sharper and smoother video stream. Support video stream histogram extension, Negative and positive switching, Gray calibration, Clarity factor for focusing etc.
Bit Depth	Switch between 8 bits and 12 bits. 8 bits is the basic Windows image format. 12bits will have higher image quality but moderate FPS.
ROI	ROI, Region of interest. This function can set the ROI on the video window. When the ROI group was expanded, a dotted rectangle with "Handles" will appear around the video window that will let you alter the ROI. Use mouse button to adjust the ROI size. If ROI is ok, click Apply will set the video to ROI size, Defaults will return to the original size.
Dark Field Correction	To Enable the Dark Field Correction, one should capture the dark field image first. After the images are captured, the Enable button will be clickable. Checking the Enable button will enable the Dark Field correction. Unchecking it will disable the Dark Field Correction.
Cooling	Set the TE-Cooling target temperature and set the fan On/Off;
Parameters	Load, save, overwrite, import, export self-defined parameters of camera control panel (including calibration information, exposure and color setting information);

4.1.3 Practical Functions with Good Results

Video functions	Various professional functions: Video broadcast; Time lapse capture; Video record; Video stream grid; Image stitch; Video scale bar, date etc.
Image Processing and Enhancement	Control and adjust image by denoise, sharpen, color toning deinterlace, all kinds of filtering algorithm and mathematical morphology algorithm, range, binary, pseudo color, surface plot and line profile ital..
Image Stacking	Image stacking adopts advanced image matching technology. With the recorded video, regardless of shifting, rotation, scaling, the high-fidelity image can be stacked to decrease the image noise.

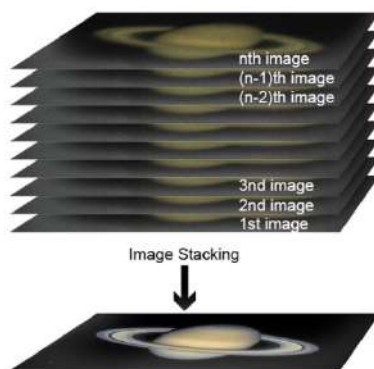


Figure 12 Image Stacking

4.1.4 Powerful Compatibility

Video Interface	Support Twain, DirectShow, SDK Package (Native C++, C#/VB.NET)
Operating System	Compatible with Microsoft® Windows® XP / Vista / 7 / 8 / 10 (32 & 64 bit), Mac OSX, Linux
Language Support	Unlimited language support, currently available in Simplified Chinese, Traditional Chinese, English, Russian, German, French, Polish and Turkish

4.1.5 Hardware Requirement

PC Requirements	CPU: Intel Core 2 2.8GHz or higher
	Memory: 2GB or more
	USB port: USB3.0/USB2.0 port
	Display: 17" or larger
	CD-ROM

4.2 ATR3CMOS01700KPA and Dshow

ToupTekDshowAstroSetup (Click the left blue link to download)

DshowAstro is an interface driver providing Dshow standard support for ToupTek USB astronomy camera

Supported OS: Windows:

- x86: XP SP3 or above; CPU supports SSE2 instruction set or above
- x64: Win7 or above

Supported Camera:

- All ToupTek astronomy cameras

4.3 ATR3CMOS01700KPA and the 3rd Party Software

4.3.1 Support Software

No.	Software	Version	WDM	ASCOM	Native
1	PHD Guiding	2.3.0(2014)	√	√	√
2	Nebulosity	3.2.2(2014)	√	×	/
3	MaxIm DL	5.23(2013)	√	×	/
4	SharpCap	2.1(2014)	√	×	/
5	MetaGuide	5.2.0(2014)	√	/	/
6	FireCapture	2.4.05(2014)	√	/	/
7	Astroart	5.0(2014)	√	×	/

4.3.2 ASCOM Platform

All AstroCam telescope camera drivers request to install ASCOM platform, free.

<http://www.ascom-standards.org/index.htm>

You can download the ASCOM package from : <http://ascom-standards.org/Downloads/Index.htm>

4.3.3 PHD Guiding

A popular free guide software: <http://openphdguiding.org/>

ToupTek's telescope camera support Native/ASCOM/WDM driver to run the video.

4.3.4 Nebulosity

A popular cooled camera control/image process software directly supported via ASCOM.

4.3.5 MetaGuide

Autoguiding software with novel method to avoid the atmospheric agitation. The latest version support GCMOS01200KPB and the guide port: <http://www.astrotech.com/Bliss/MetaGuide/>

4.3.6 MAXIMDL

Famous full functional CCD Control/Image Process software. Popular used in US.

4.3.7 AstroArt

Famous full functional CCD Control/Image Process software. Popular used in Europe.

4.3.8 FireCapture

Great free planetary capture software. Support part of AstroCam series telescope camera.

4.3.9 SharpCAP

A nice free planetary capture software support WDM cameras includes AstroCam series telescope camera.

4.3.10 Registax

A popular free planetary stacking and processing software.

4.3.11 AstroStack

A planetary stacking and process software.

4.3.12 DeepSky Stacker

A free deep sky image stack and process software.

5 Service

For software upgrades, please refer to “Download” on our official website: <https://Touptek-astro.com/>

For customers who purchase the cameras from local dealer, please contact your dealer for more inquiry.

For technical support, please contact e-mail address: karas@Touptek-astro.com.